

To Listen to Audio CD in Social Hall (Using the DVD Player): VER 12/2015

1. Turn Power ON by using the labeled power switch mounted in the equipment cabinet. (top of cabinet)



2. Press MAIN button on touch panel mounted in podium. This will activate touchscreen.
3. Press **CD** button. Do not hold down, press and release. The DVD/CD screen will appear



4. Open CD tray by pressing EJECT icon. Insert your disk then press EJECT button again to

close the tray.

5. Once the CD has loaded, press PLAY button located at bottom of touchscreen (some CD's may start automatically).

6. Adjust the volume using the VIDEO SOUND slider. Be sure the white square button "ON" is illuminated.



7. When CD is finished, remove your disc by using the EJECT button.

8. Press **POWER OFF** button on touch panel.

9. Turn Power OFF by using the orange labeled power switch mounted in the equipment cabinet. (top of cabinet)